



Examiner or Generator with Analyzer Default Setup

Default setup for all Type-C, PD, DP Alt Mode, and Link Layer tests, *except* those involving UUT acting as USB host

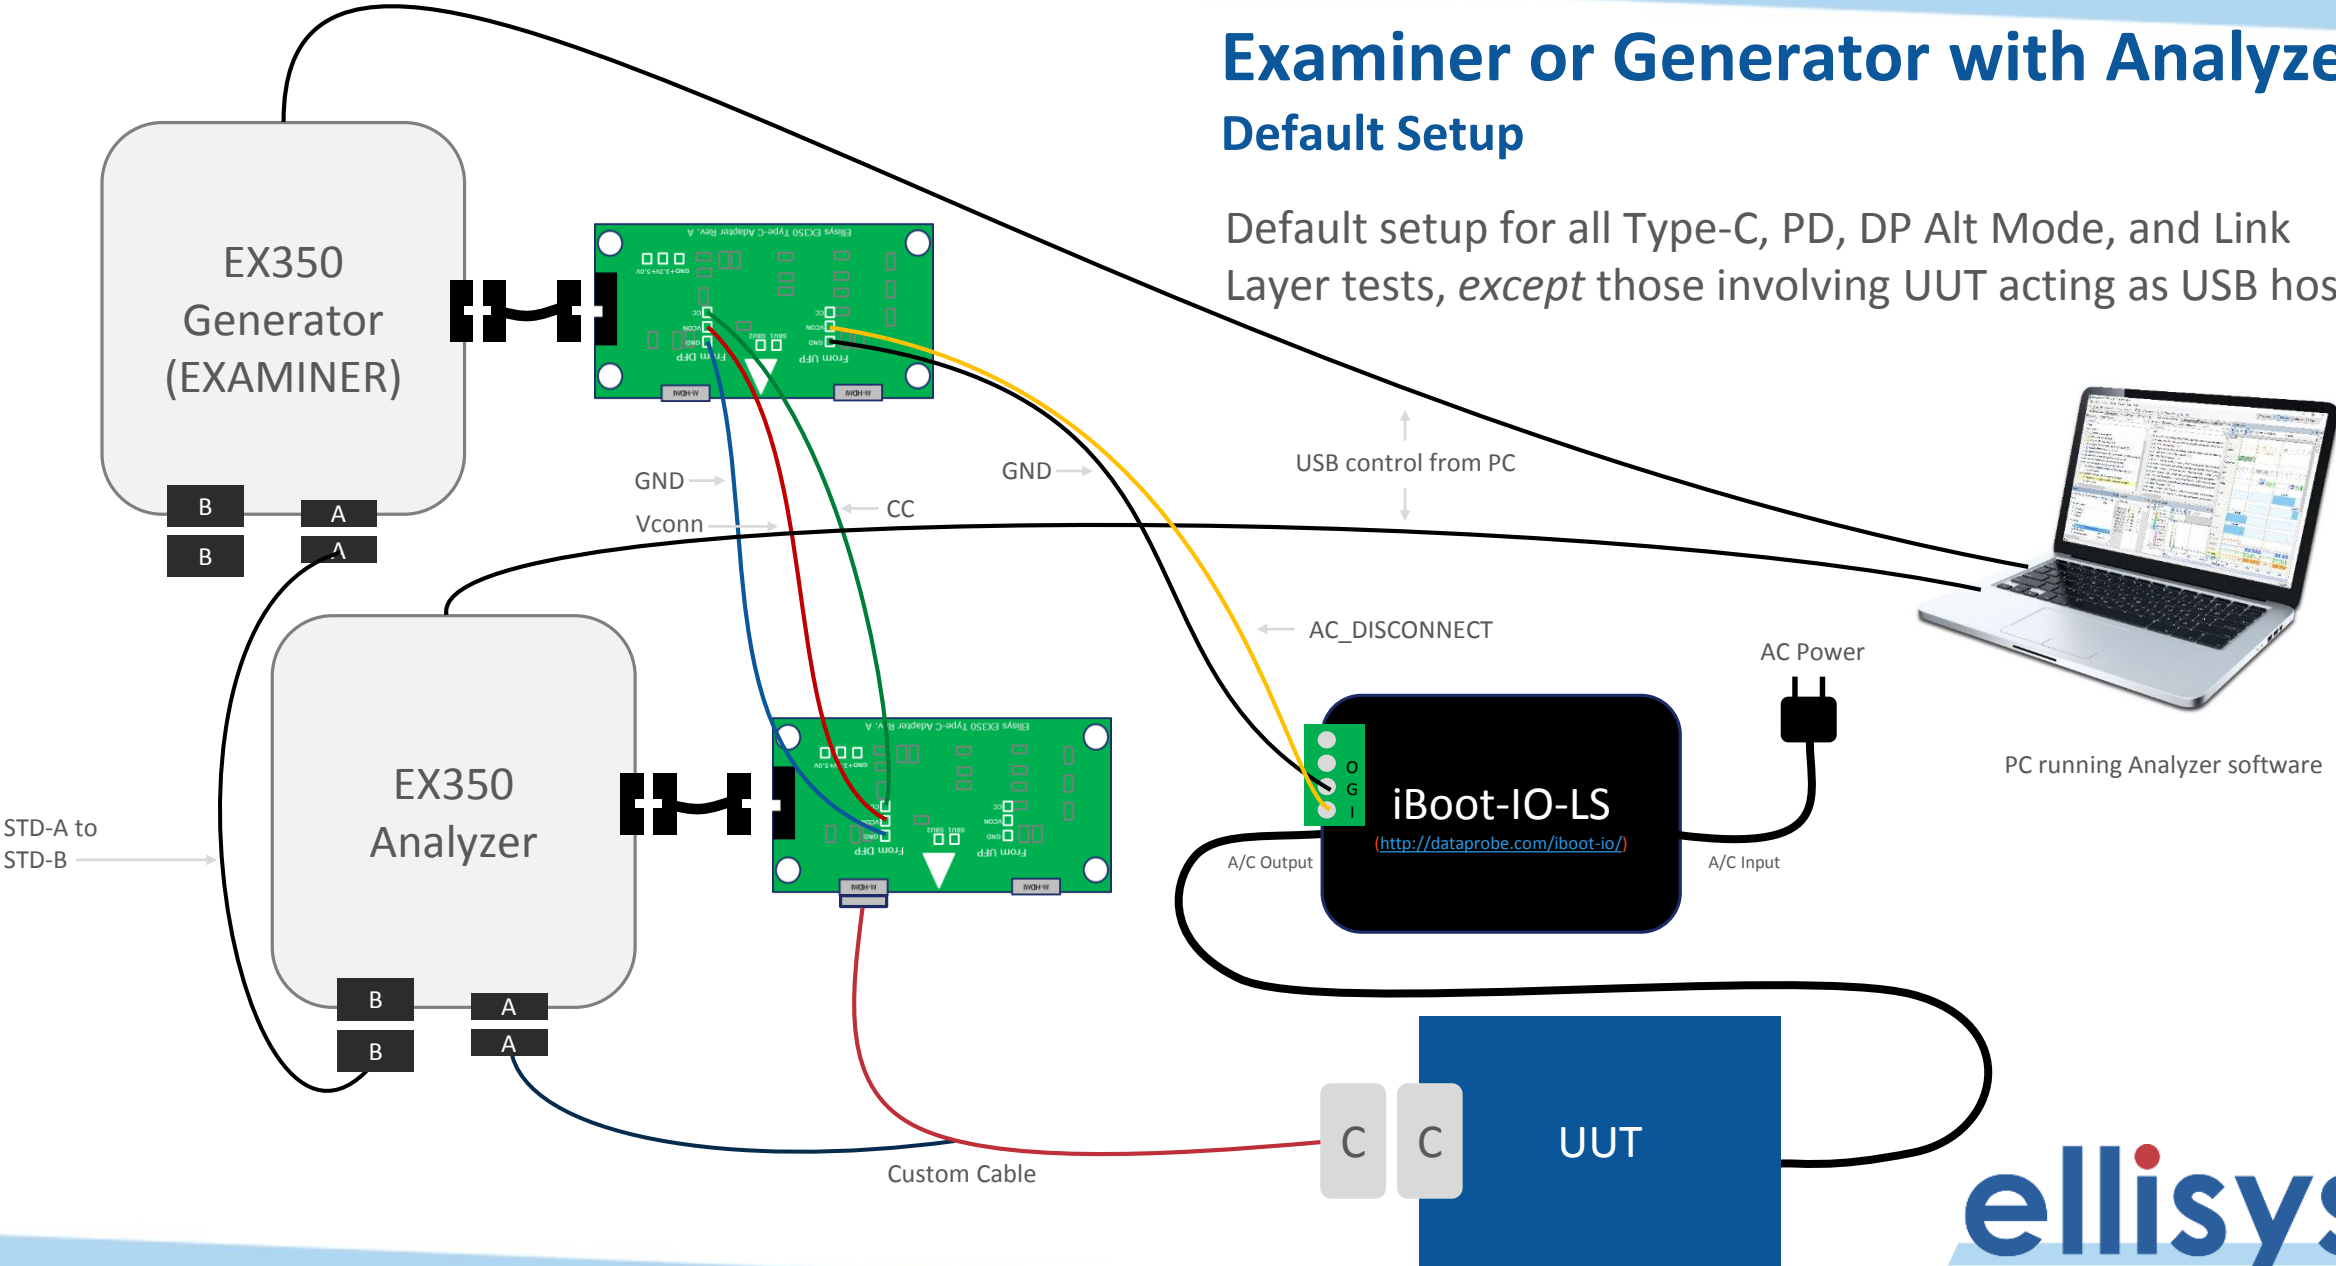


Examiner or Generator with Analyzer Setup for tests involving UUT acting as USB host

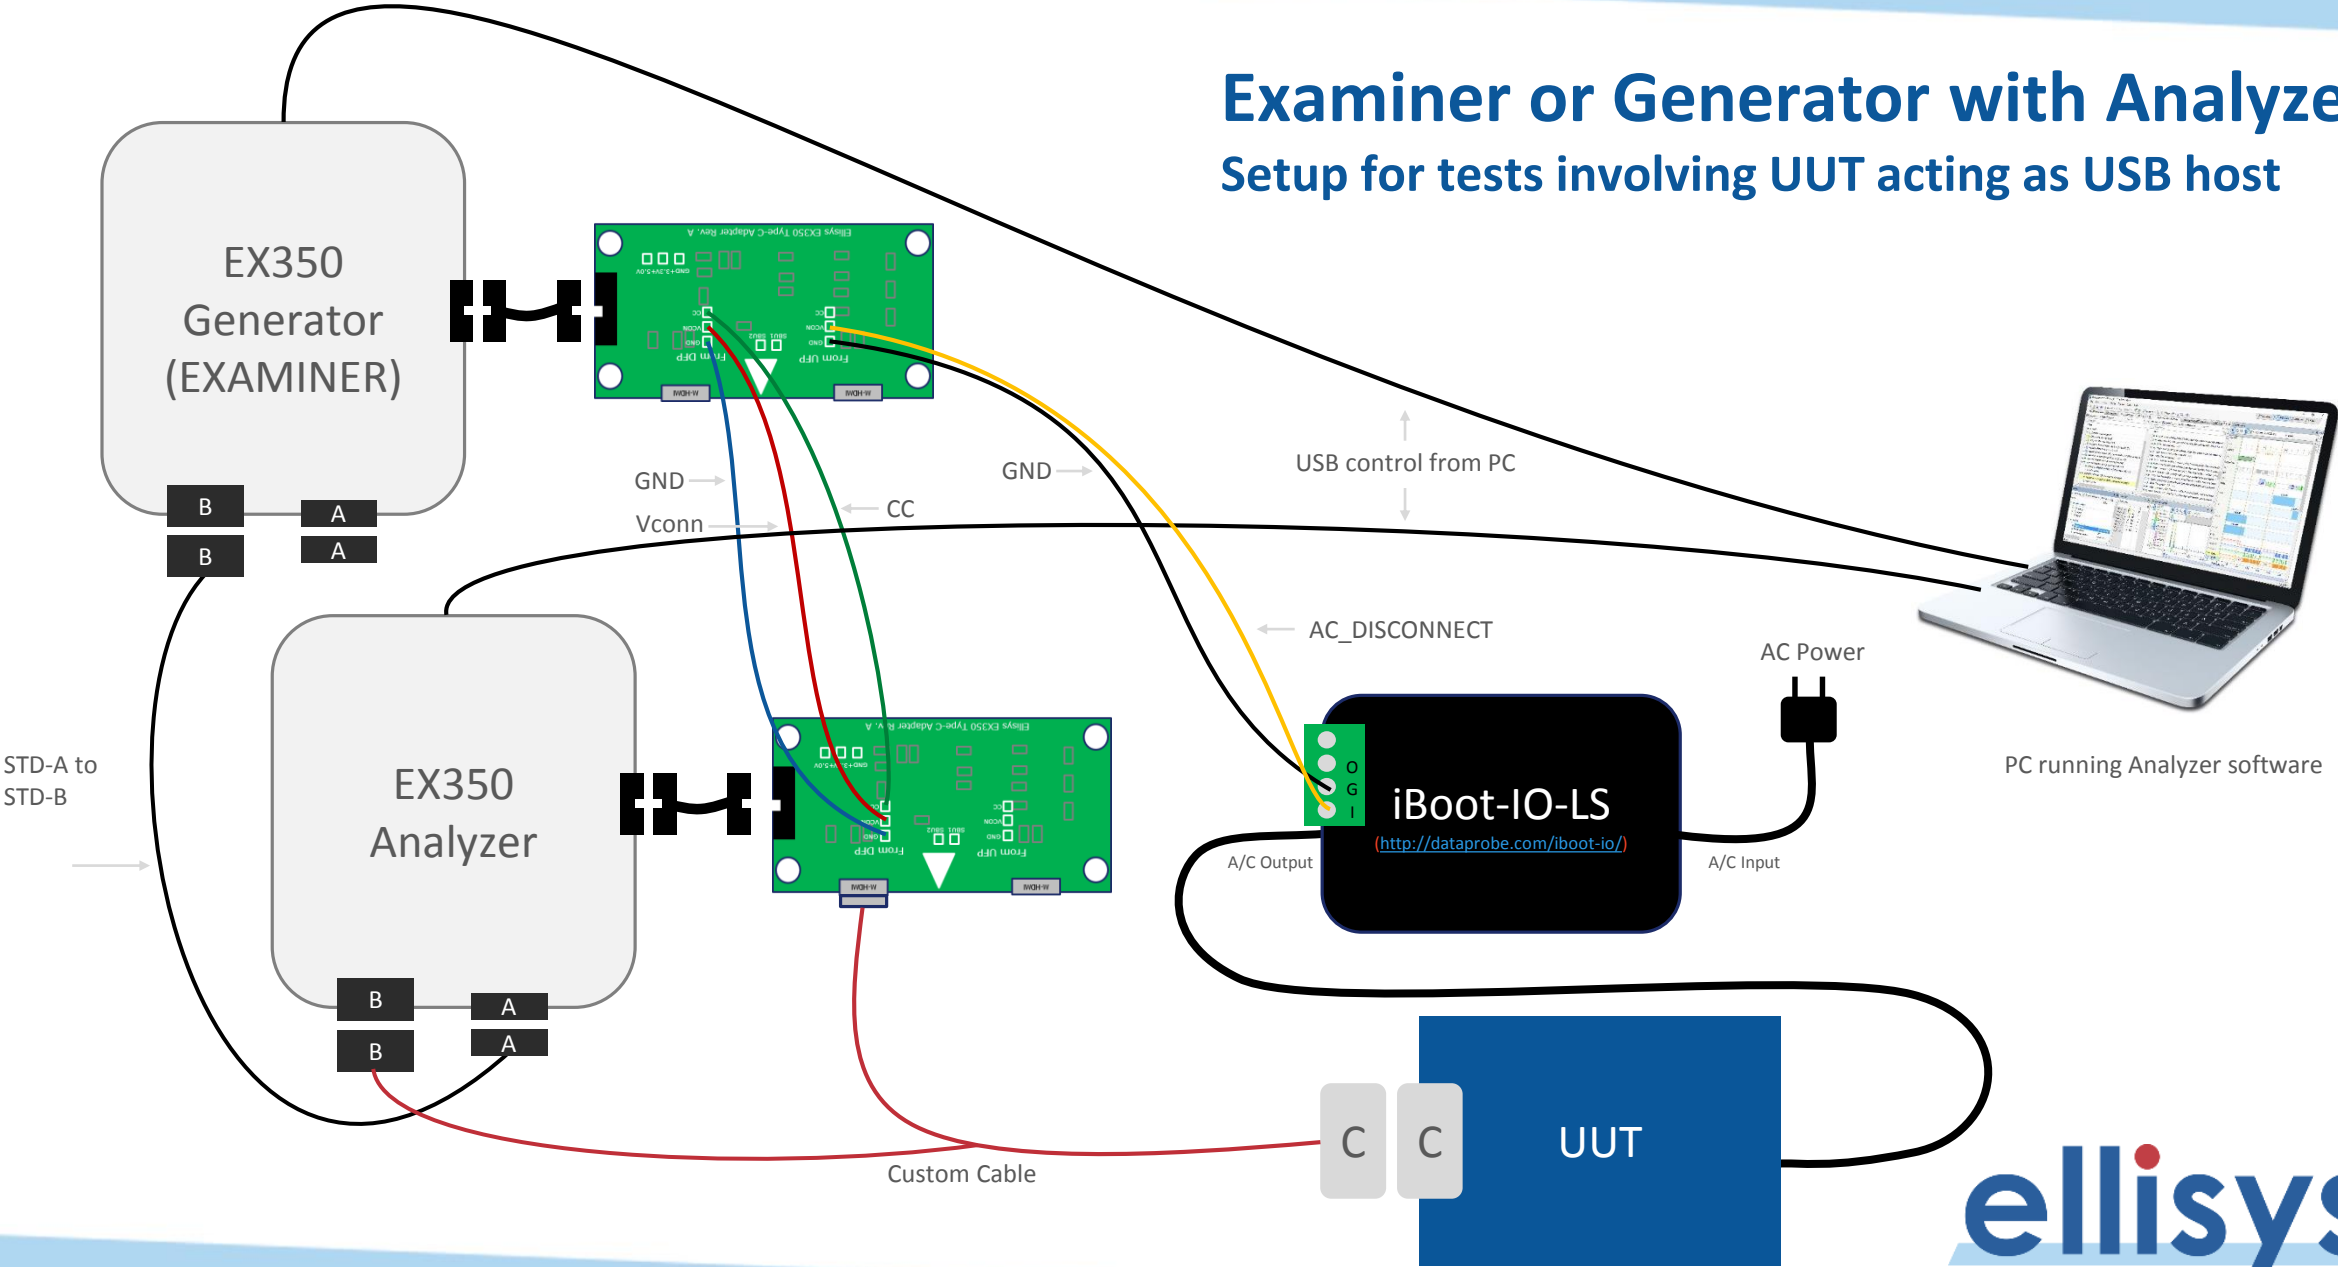


Examiner or Generator


External load setup for Source UUT

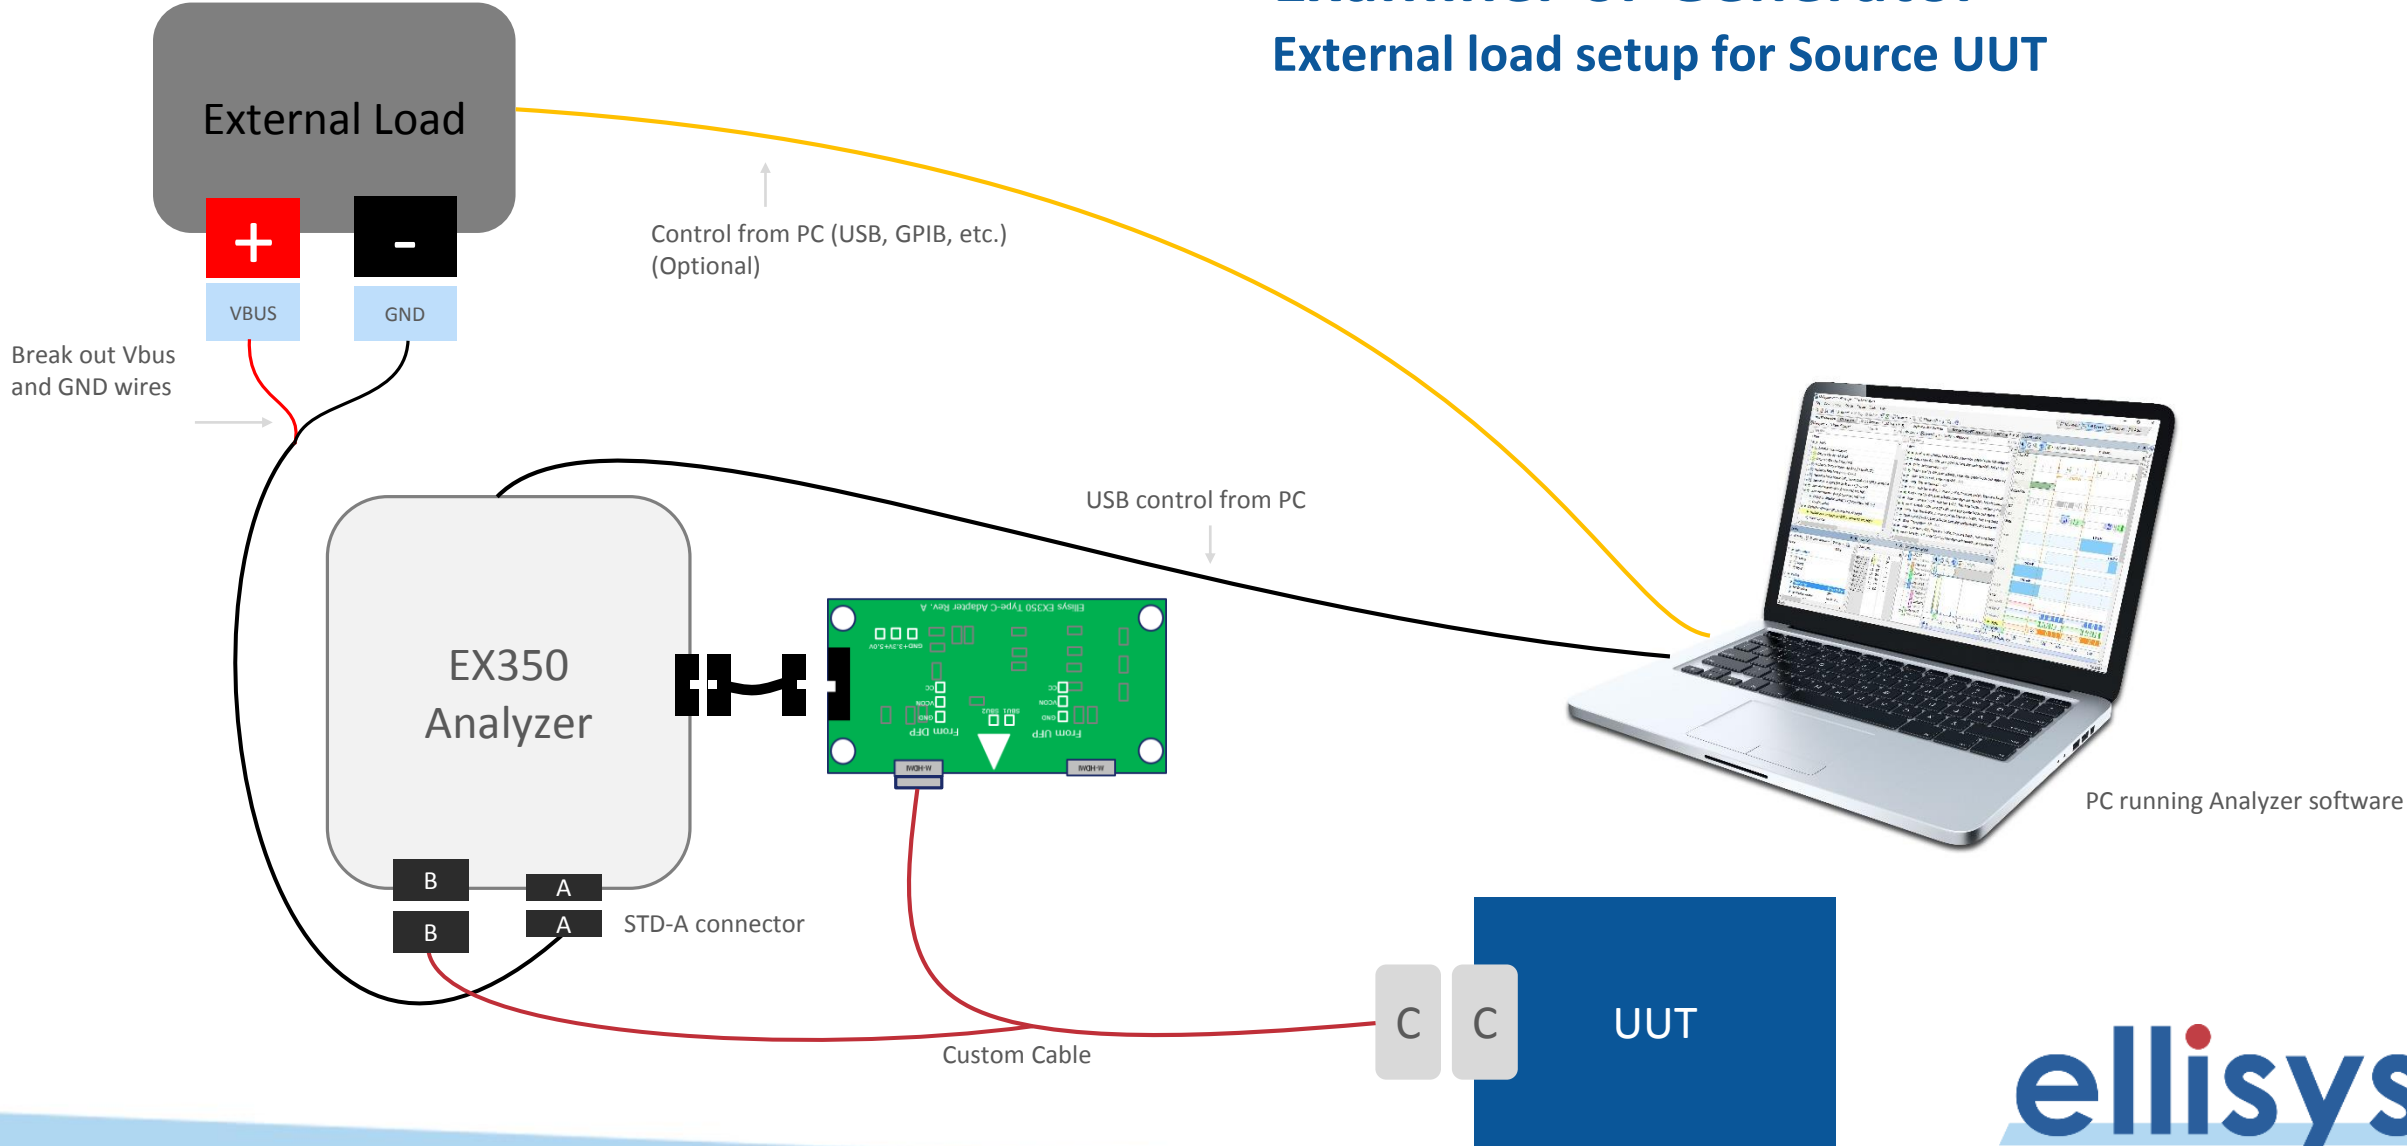


Examiner or Generator E-Marked cable

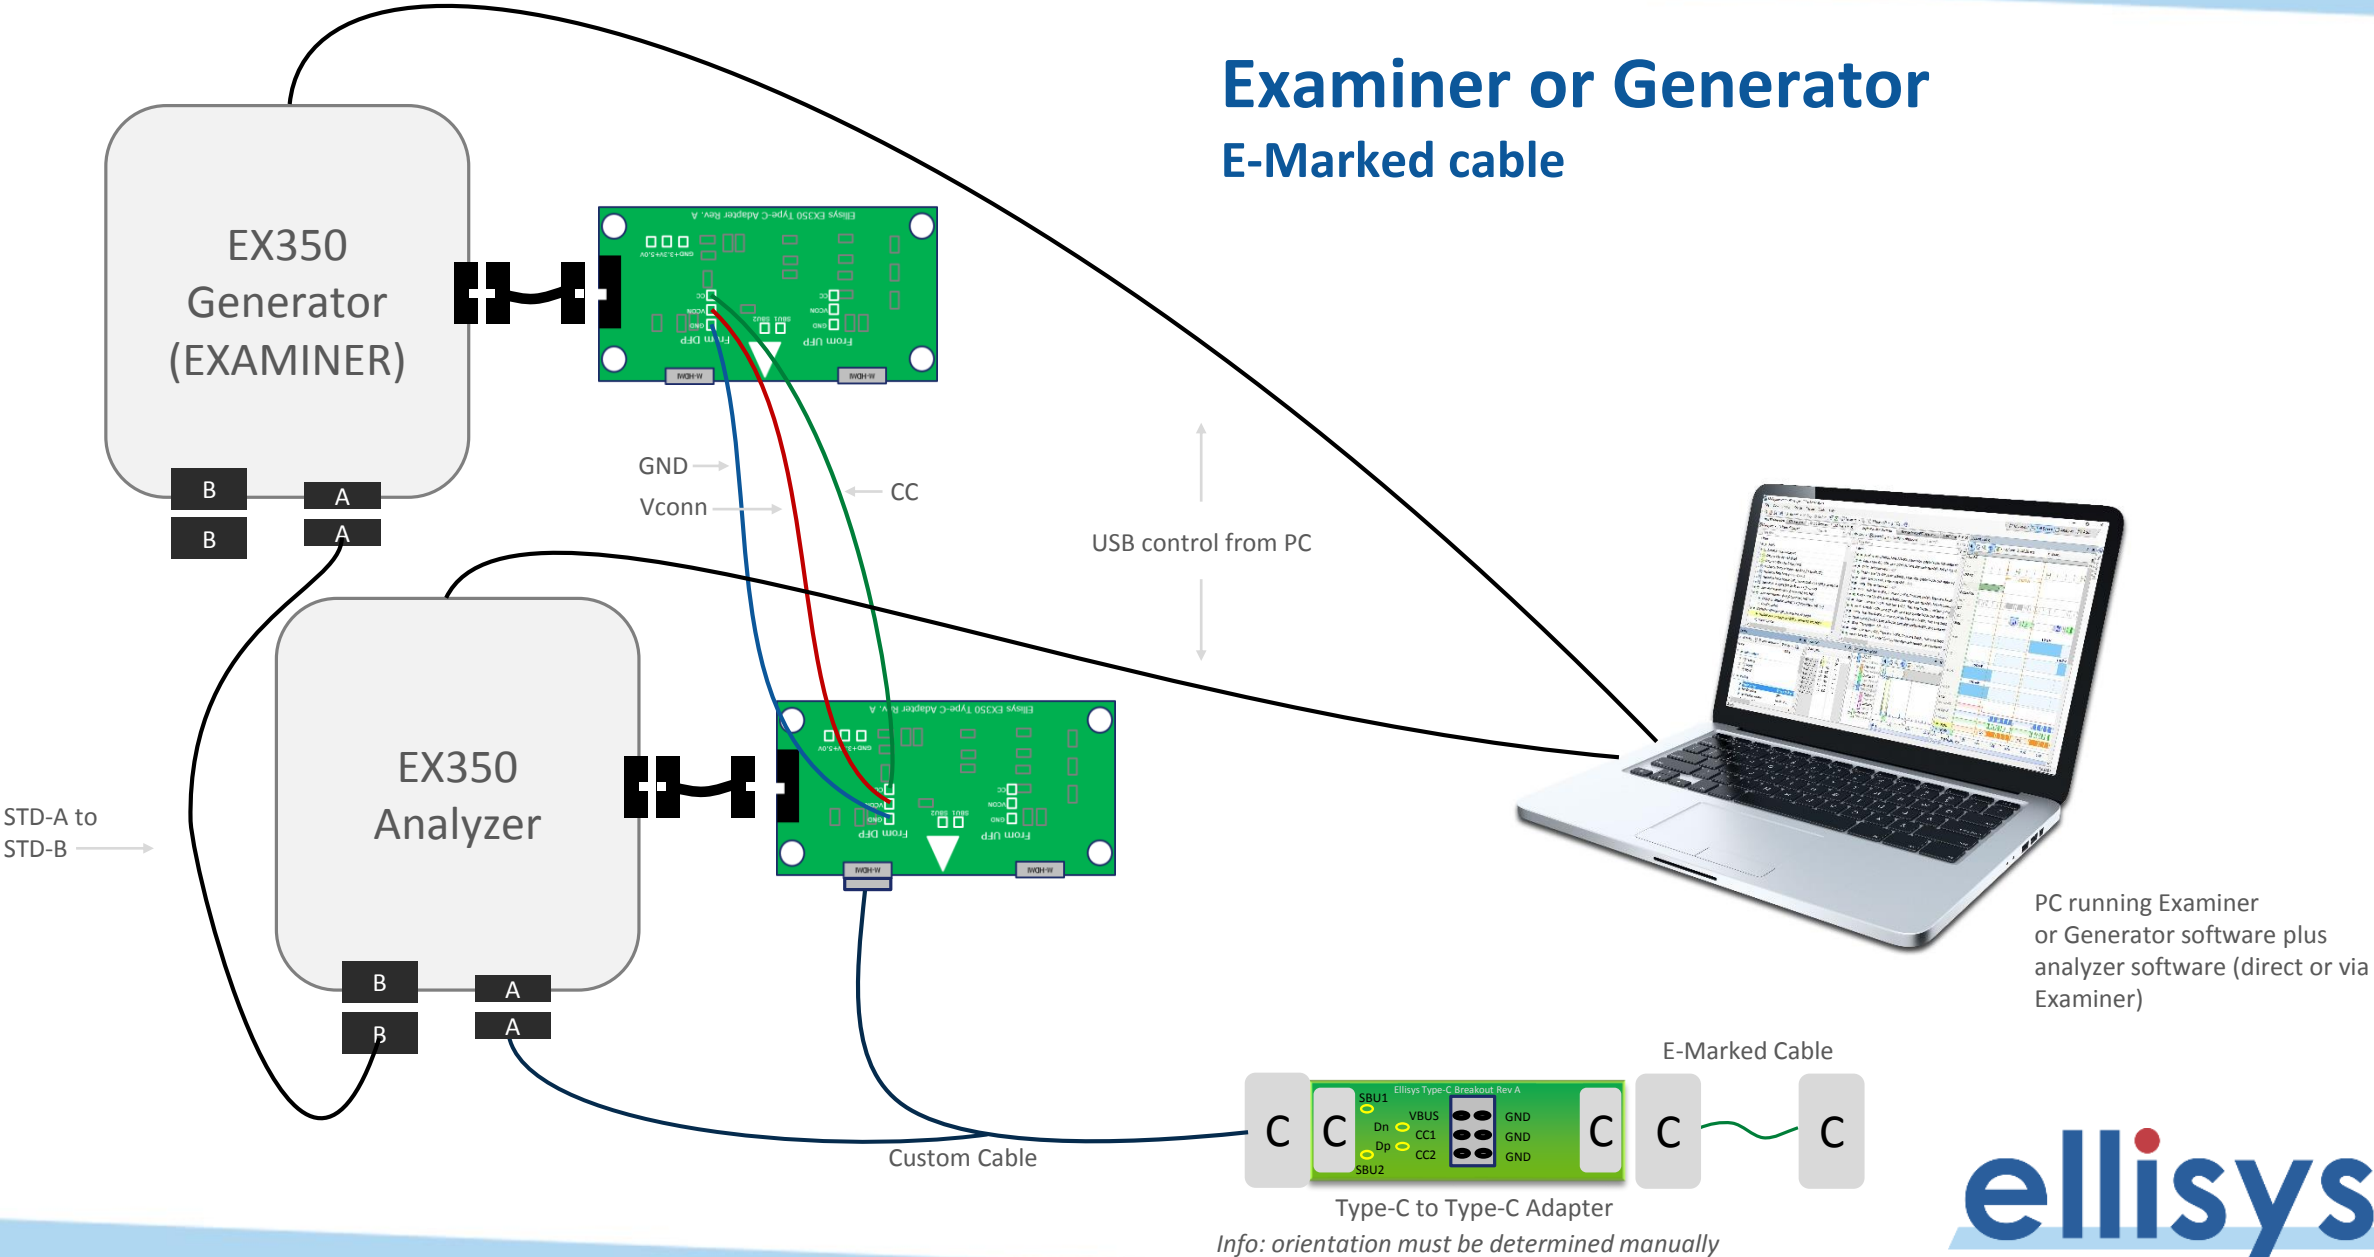

Analyzer Setup

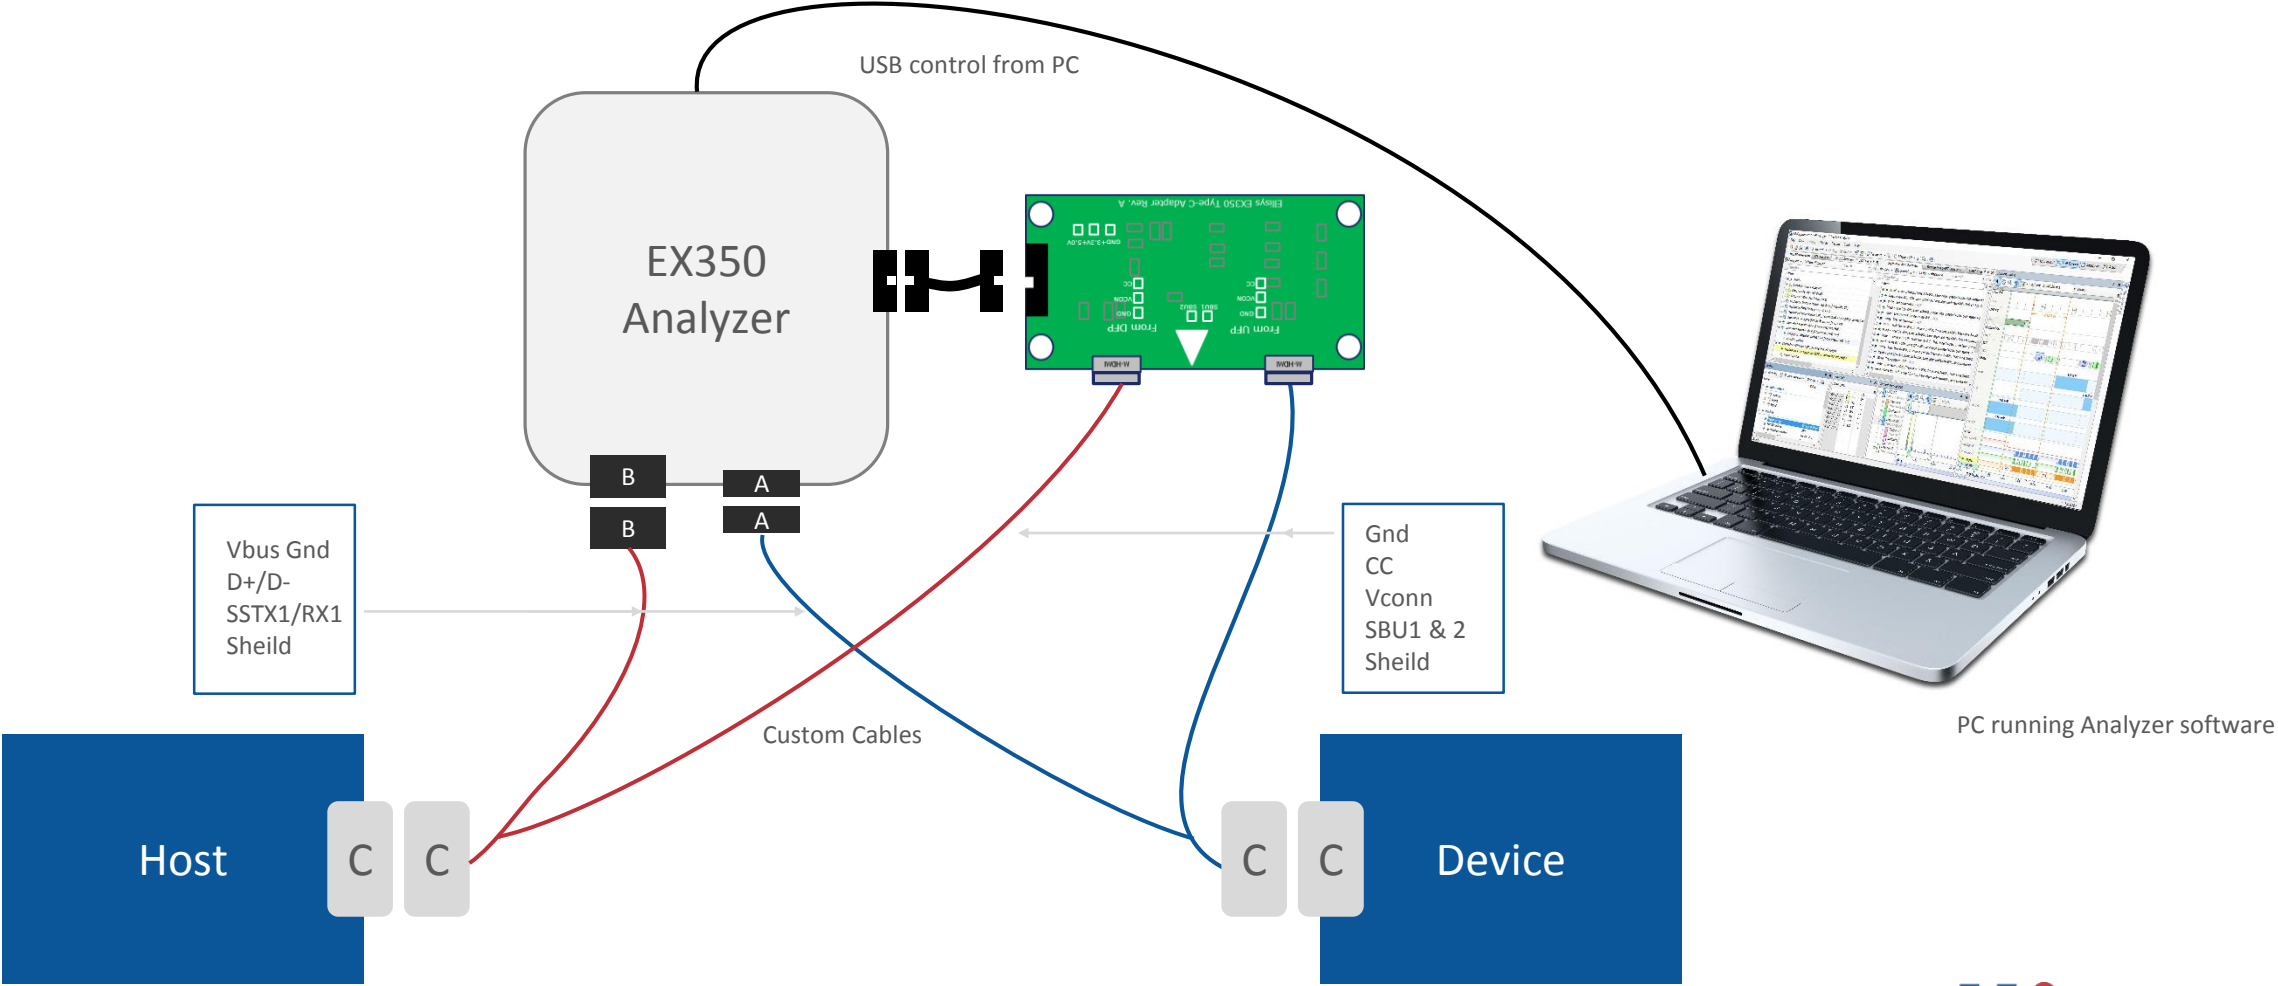


Analyzer Captive cable UUT

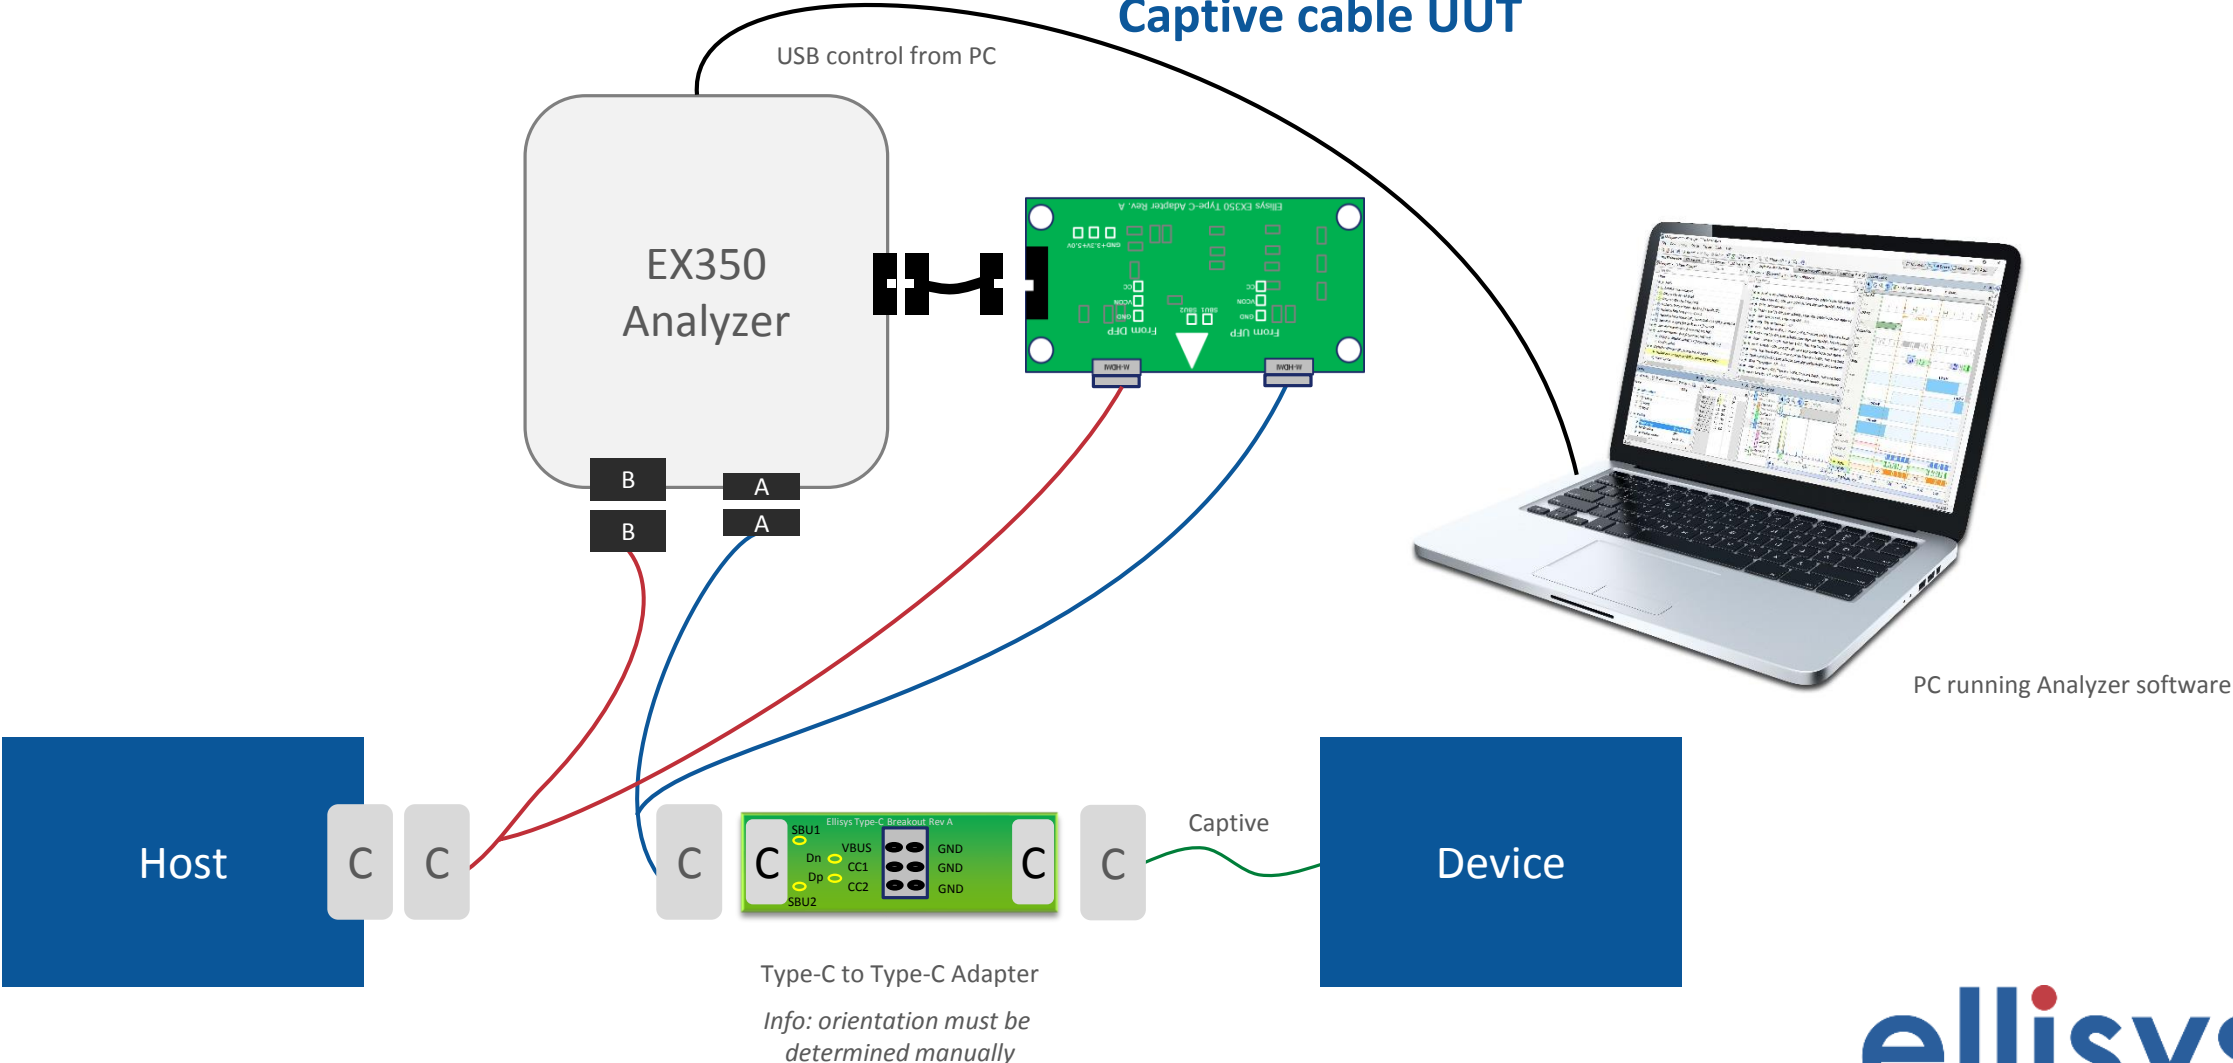


Analyzer

Passive tapping to board UUT

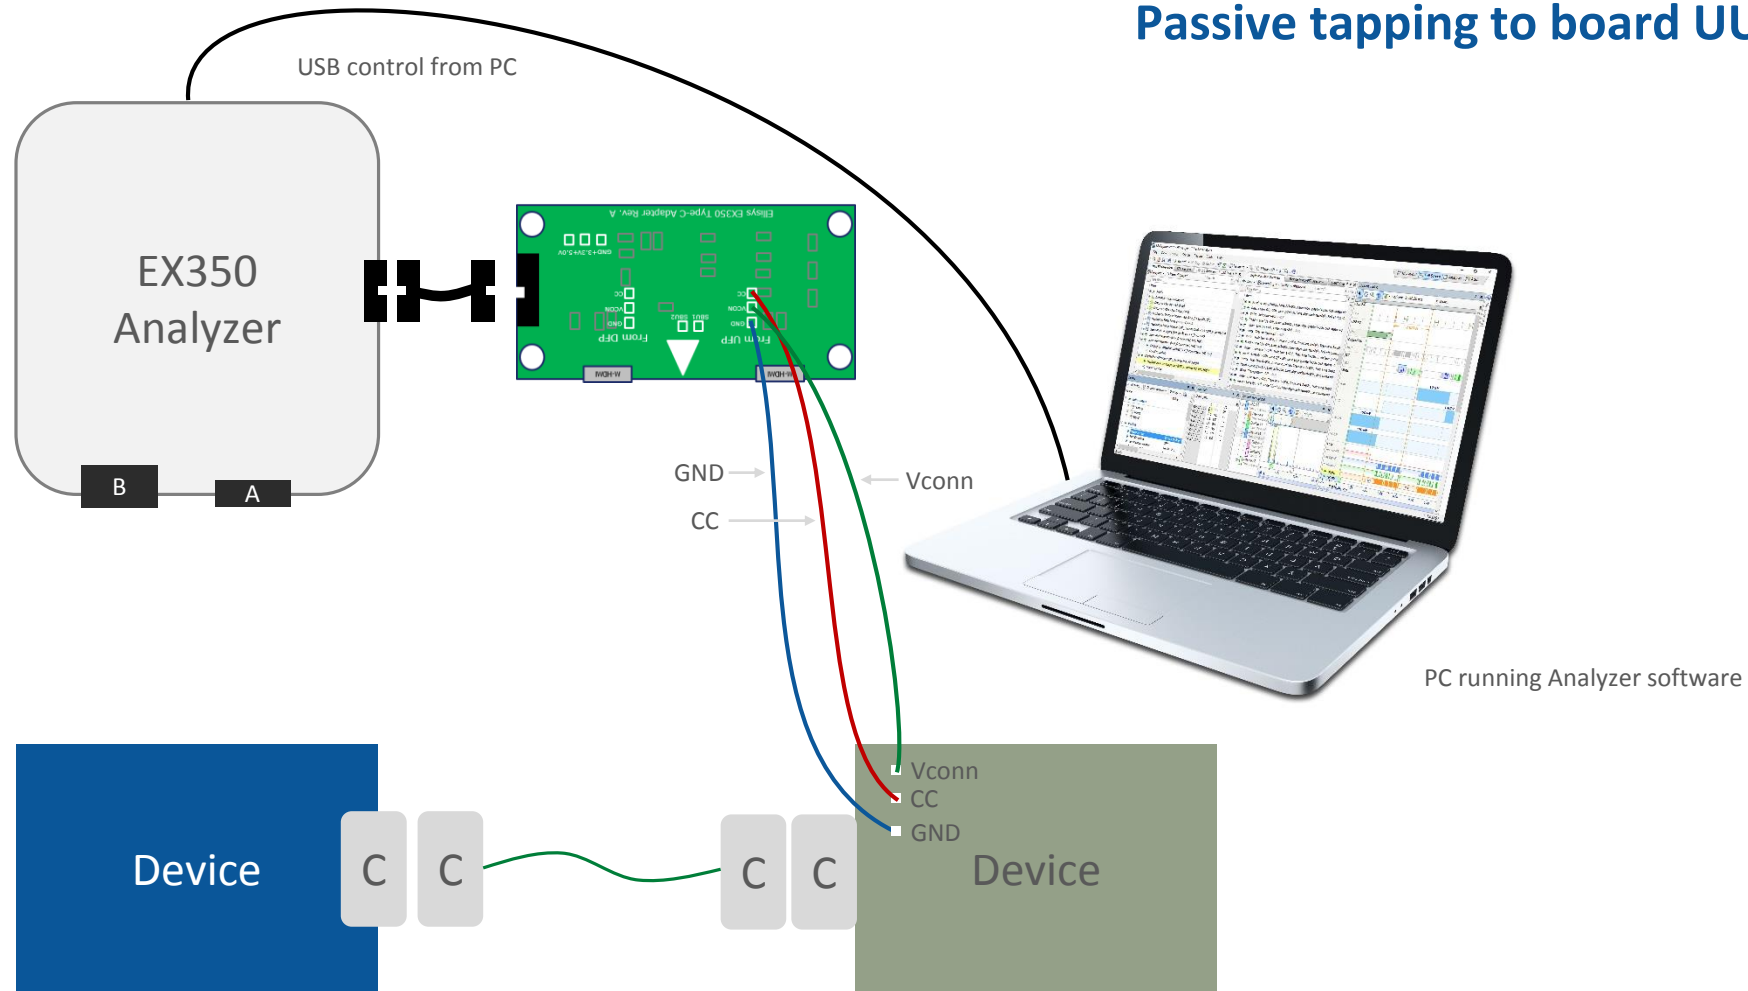


Examiner or Generator with Analyzer

USB HOST-capable UUT w/ STD-A connector

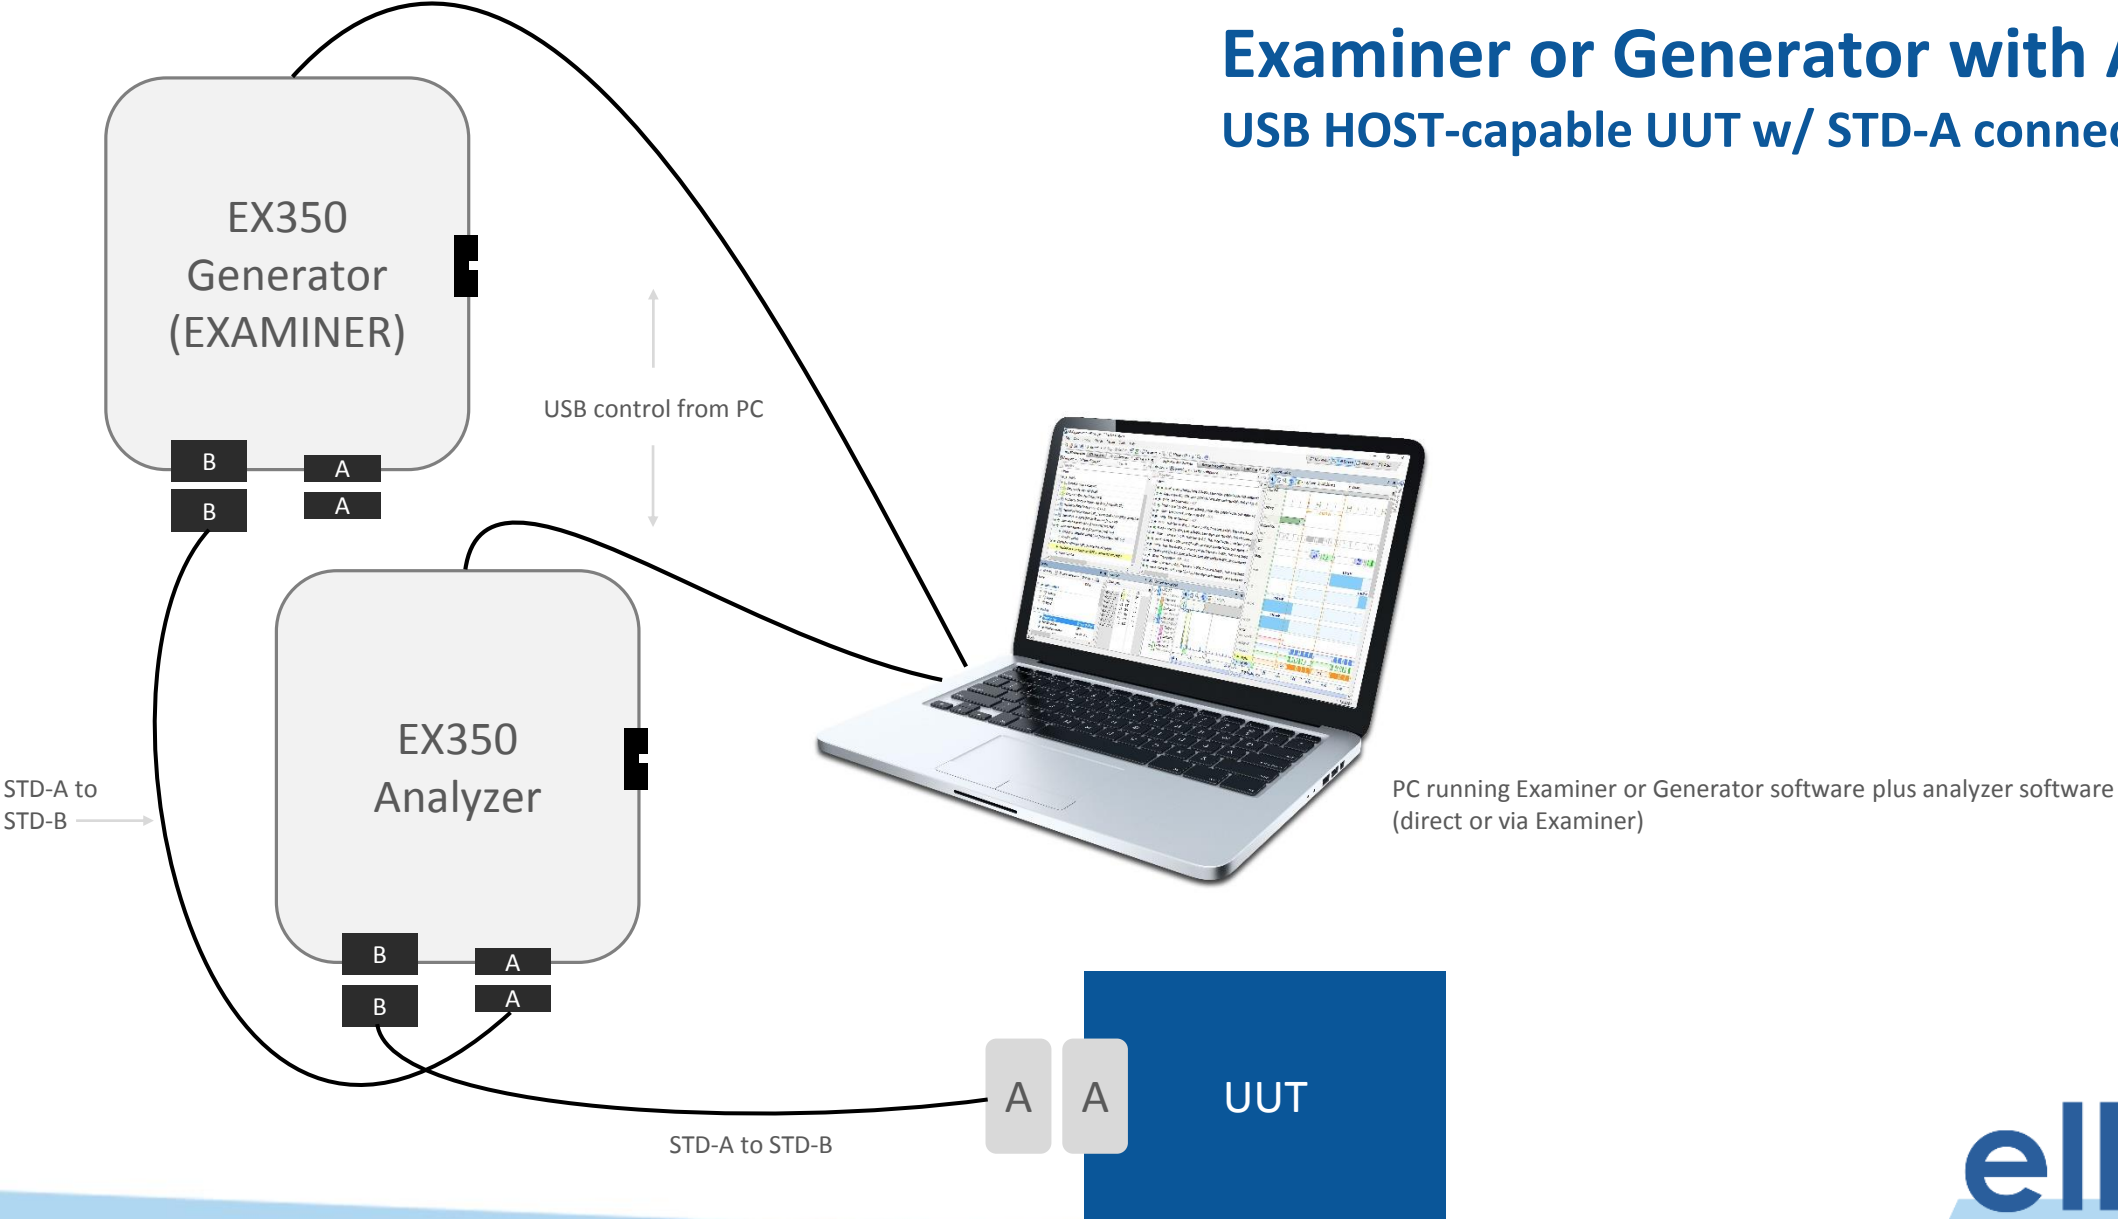


Examiner or Generator with Analyzer

USB DEVICE-capable UUT w/ STD-B connector

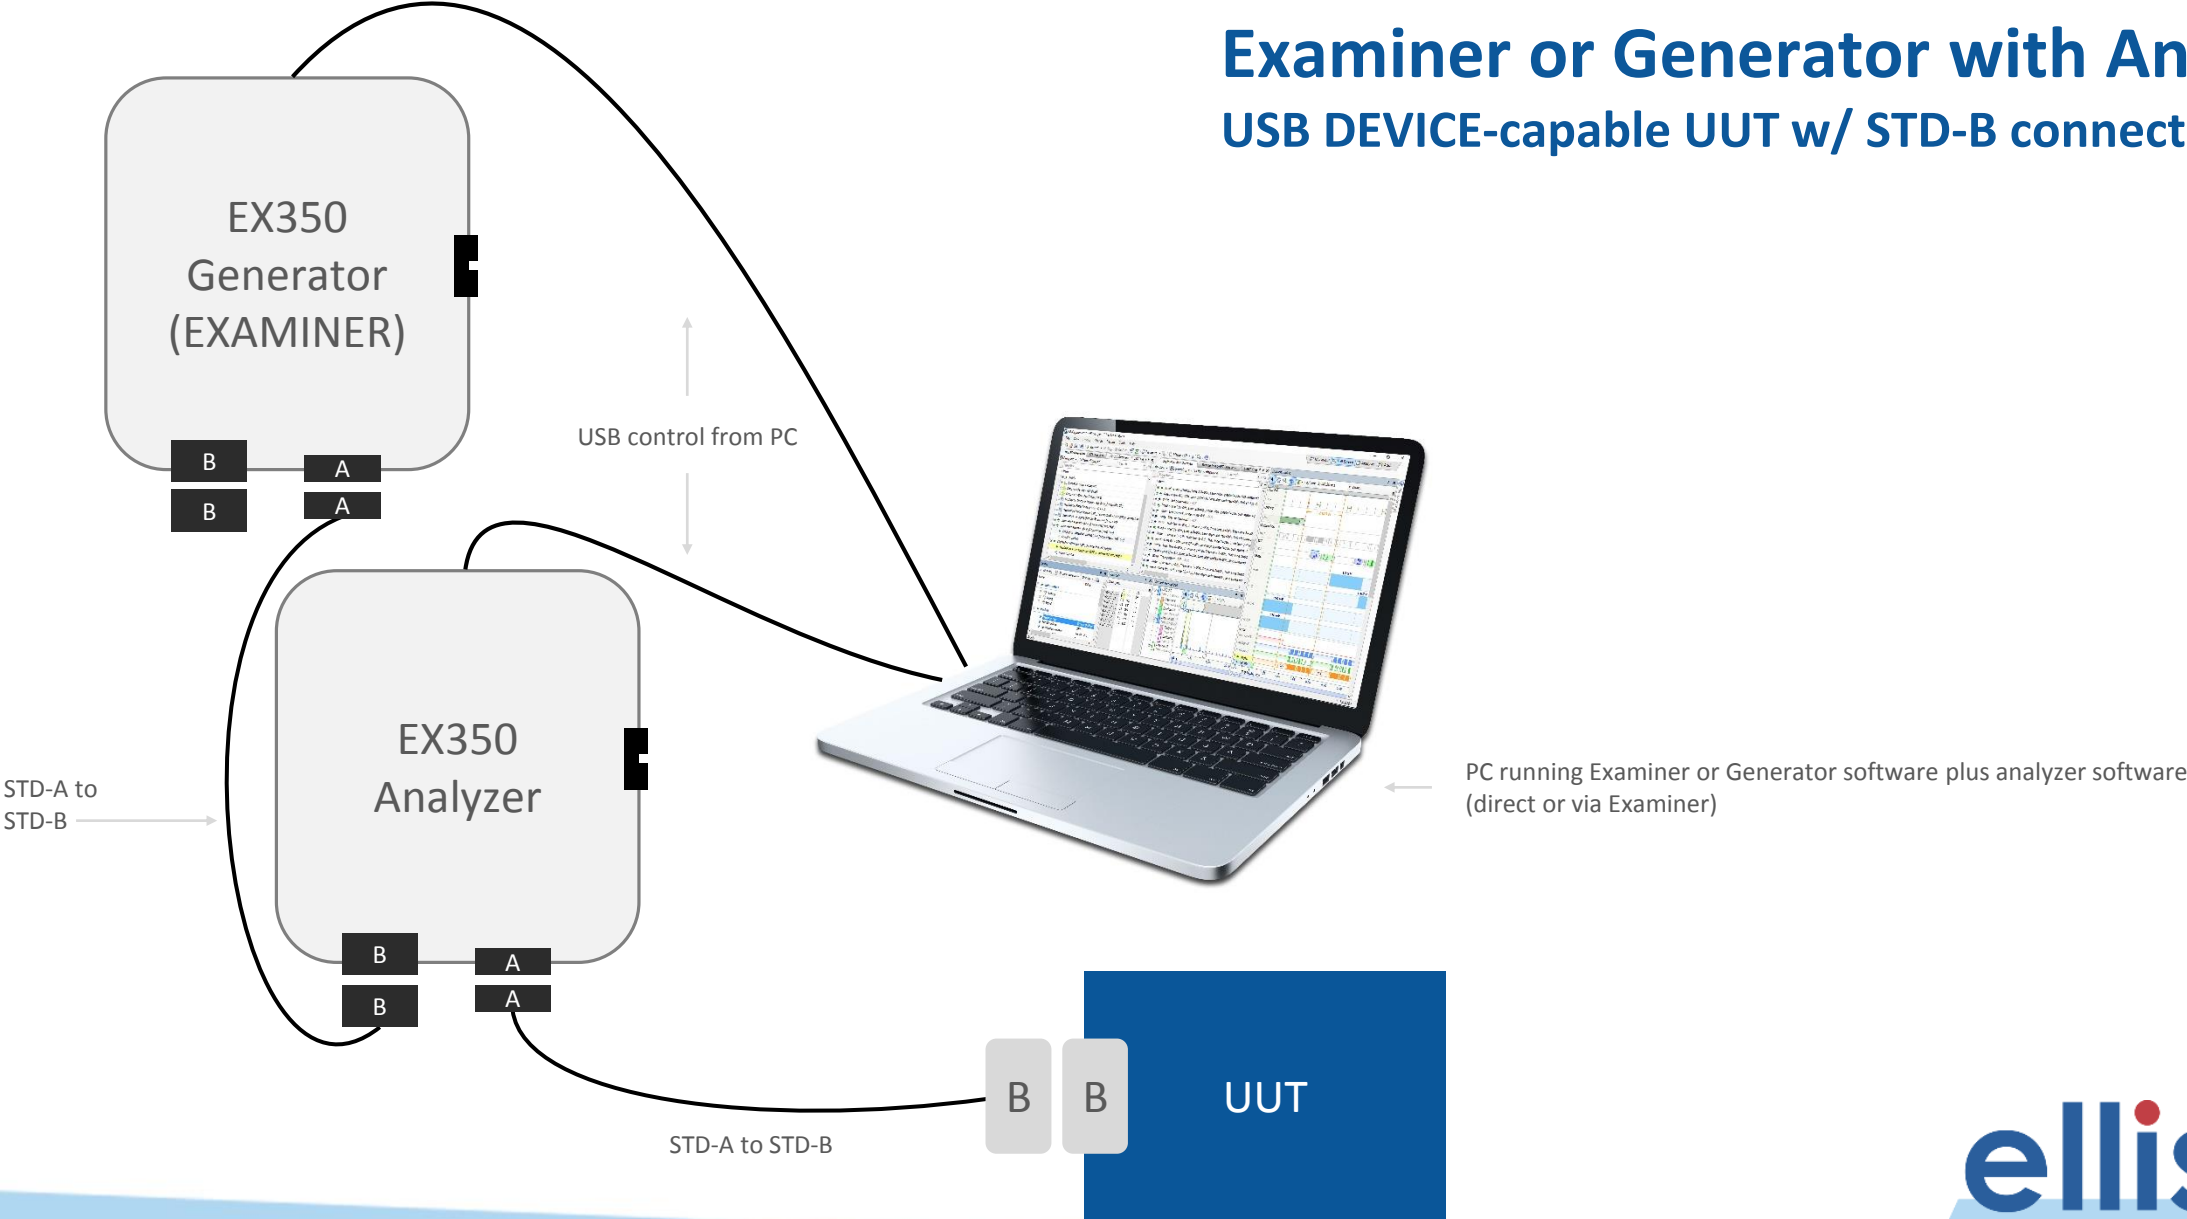


Examiner or Generator Default setup without analyzer

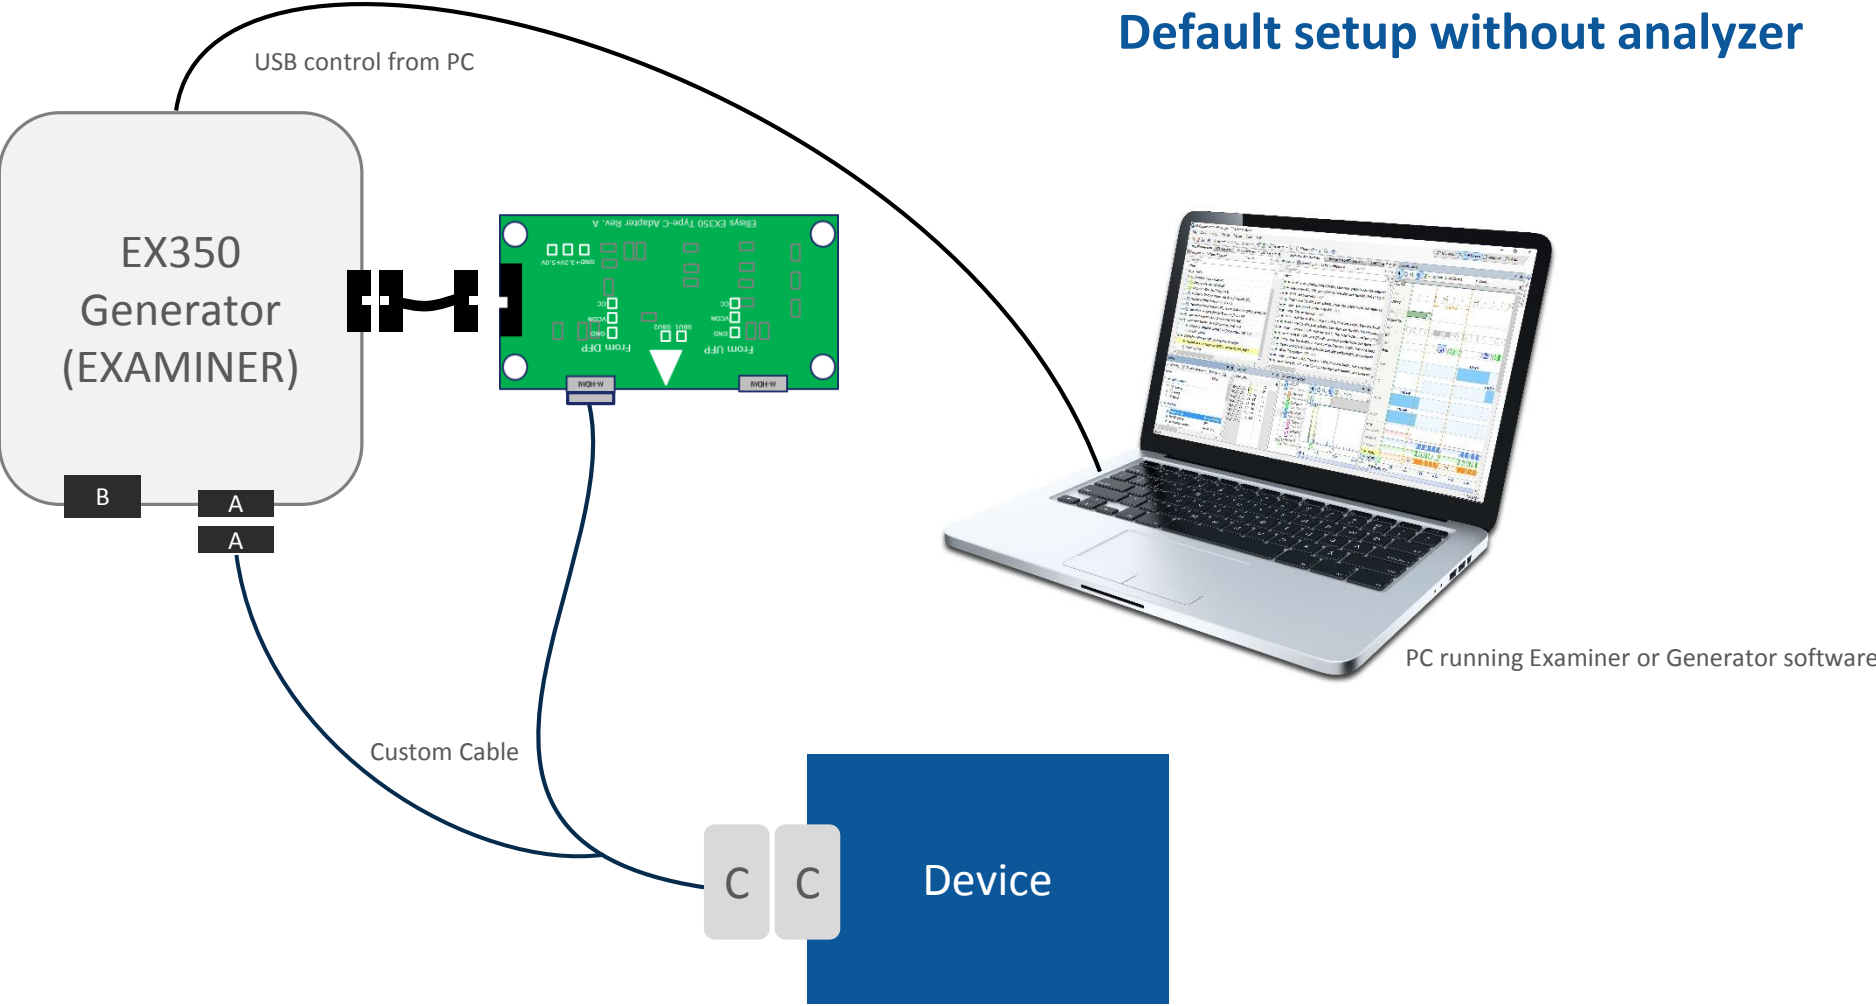

PC running Examiner or Generator software

Examiner or Generator USB Host-capable UUT

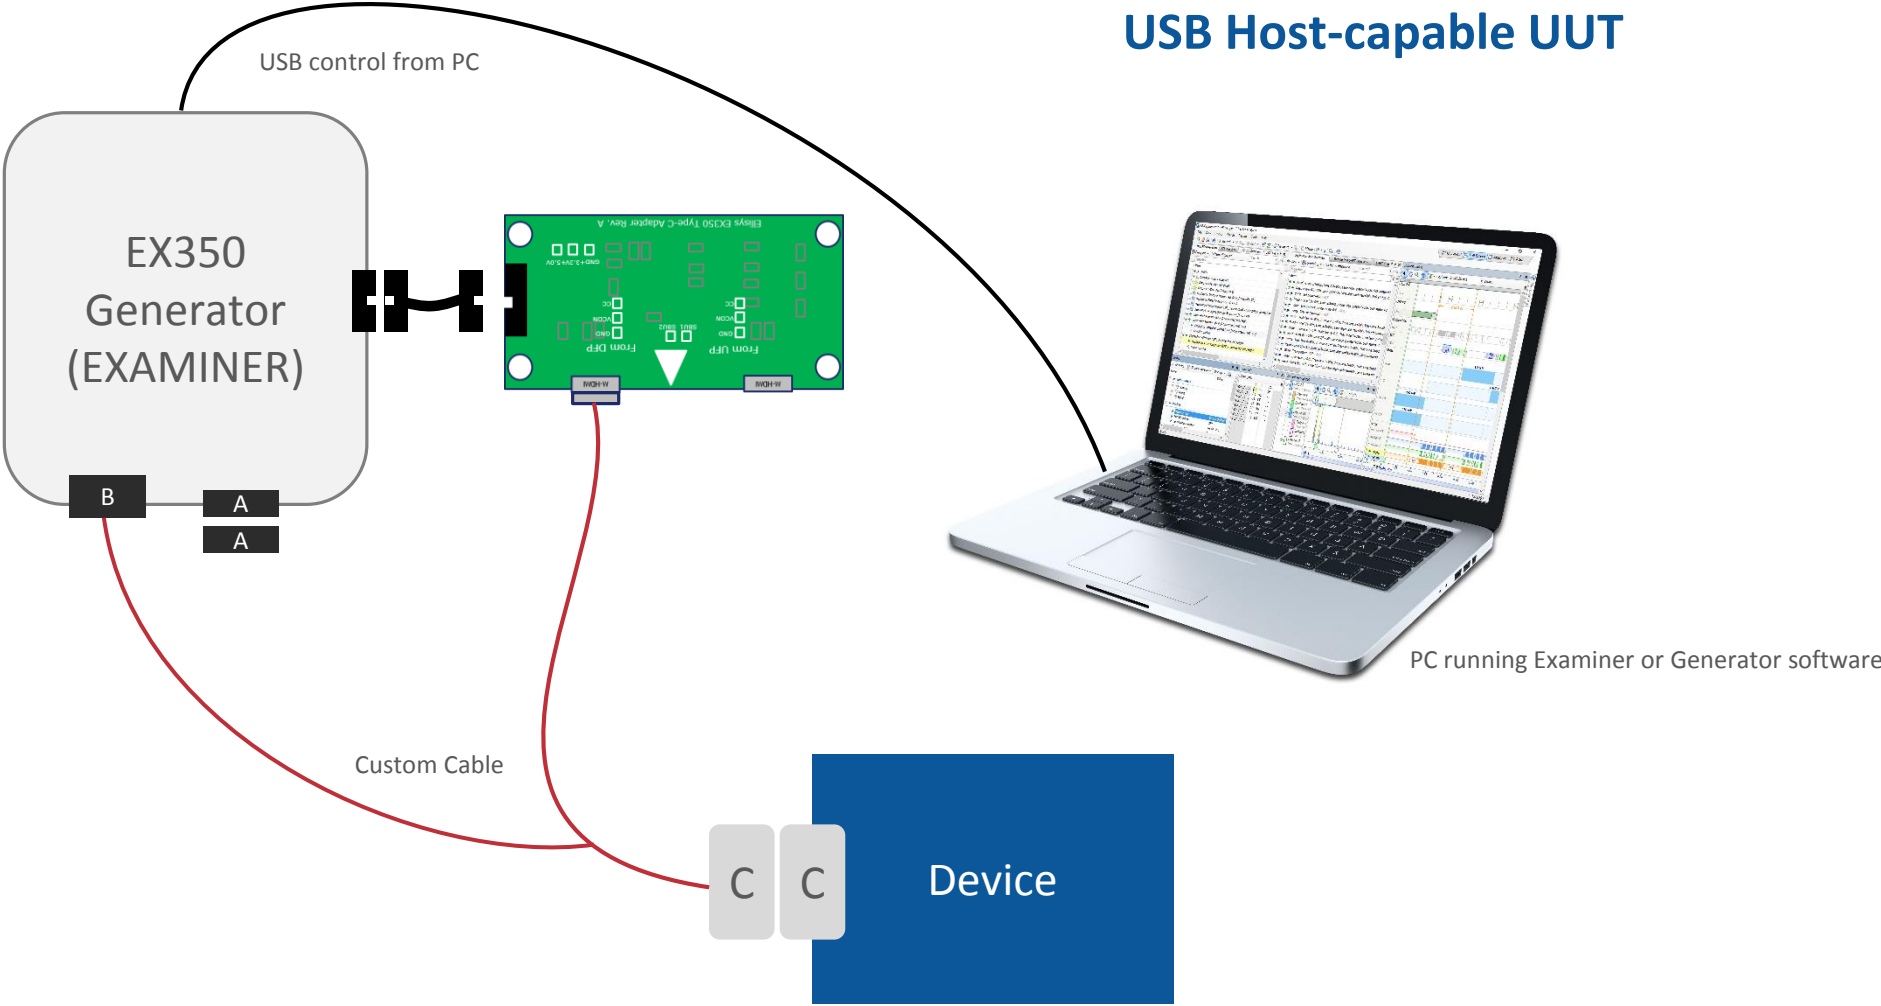

Analyzer

DP Alt Mode without blocking signal

